



# Enable/Disable PLC

- 1) Click on [Configure] → [Plugins]

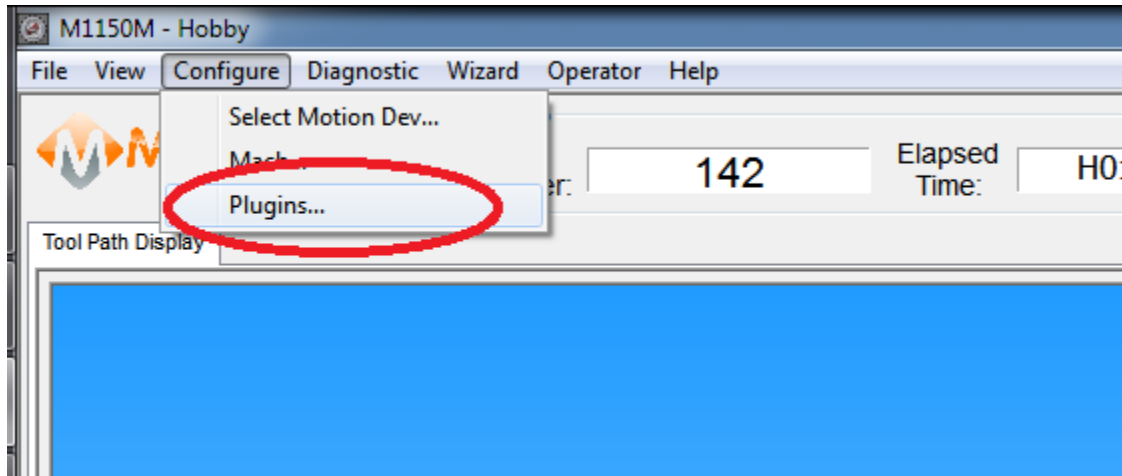

- 2) Scroll down and click [Configure] next to MachMotionModbusDevice

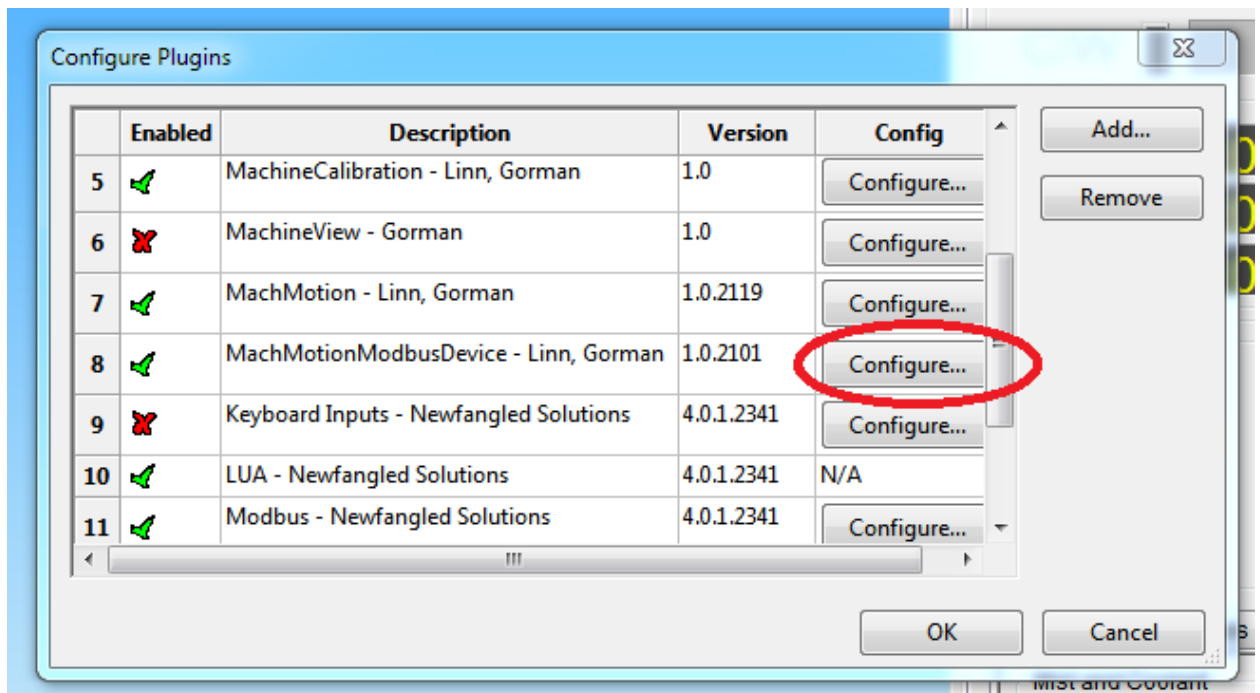

# Enable/Disable PLC

3) Click the [Enable PLC] box and save

